

**Range settings is done with DIP switches**

<b>Voltage Range</b>	<b>Voltmeter (AC V / DC V)</b>				
		<b>K1</b>	<b>K2</b>	<b>K3</b>	<b>K4</b>
	<b>600</b>				
	<b>200</b>			↑	↑
<b>20</b>	↑	↑			

<b>Ampere Range</b>	<b>Ampere Meter (AC A / DC A)</b>							
	<b>Measuring Range</b>				<b>Multiplier</b>			
		<b>K1</b>	<b>K2</b>	<b>K3</b>	<b>K4</b>		<b>K5</b>	<b>K6</b>
		<b>1</b>	<b>2</b>	<b>4</b>	<b>8</b>		<b>10</b>	<b>100</b>
	<b>1</b>	↑				<b>X1</b>		
	<b>2</b>		↑			<b>X10</b>	↑	
	<b>3</b>	↑	↑			<b>X100</b>		↑
	<b>4</b>			↑		<b>X1000</b>	↑	↑
	<b>5</b>	↑		↑				
	<b>6</b>		↑	↑				
	<b>7</b>	↑	↑	↑				
	<b>8</b>				↑			
	<b>9</b>	↑			↑			
<b>15</b>	↑	↑	↑	↑				
<b>↑ : Switch ON</b>								

**Please consult manual that comes with the device**